

AT2140 Dosimeters

Versions:

AT2140, AT2140A, AT2140A/1

POCKET DOSIMETERS



Compact energy efficient instrument for measurement of ambient dose equivalent and ambient dose equivalent rate of continuous gamma radiation.

The dosimeter can be used by radiation control services or by untrained people concerned with radiation background level in their place of work, residence and recreation, as well as for educational purposes.

Operating principle

The operation principle is based on the count rate measurement of impulses generated by Geiger-Muller counter tube under the influence of radiation. Count rate is converted automatically into measurable physical values throughout the range.

Dosimeters allow selecting one of eight pre-set dose rate and dose threshold levels.

Energy compensating filter facilitates energy dependence correction of sensibility in entire energy range of gamma radiation.

Microprocessor-based unit is responsible for controlling the Dosimeter operating modes, calculations, storing and displaying measurement results and for self-checking function.

The AT2140A/1 version has a USB interface to exchange information with a PC, while "Dose Manager" application software provides the following functionality:

- Read manufacturer and individual numbers in the dosimeter
- Read the "dose log" data
- Reset (zero) the accumulated dose and "dose log" data
- Read the total operating time and the total dose accumulated by the dosimeter in the process of operation
- Dosimeter configuration:
 - Allow/deny threshold selection by a button
 - Modify individual dosimeter number
 - Adjust accumulation interval and alarm thresholds
 - Allow/deny resetting of accumulated dose by button.

Application

- Dosimetric monitoring in manufacturing facilities, health care and other institutions
- Radioecology
- Civil protection
- Fire-fighting service
- Educational institutions

Features

- Unique combination of efficiency, response and usability
- Hours of continuous operation on one set of batteries: 5000 hours (AT2140) and 10000 hours (AT2140A, AT2140A/1)
- USB interface and non-volatile memory options to create a system of automated control and accounting of personnel radiation burden (AT2140A/1)
- Indication of battery status and main units fault condition
- Autocompensation of intrinsic detector background
- Quick response to changes in radiation level
- User friendly and easy to operate
- Simultaneous dose rate and dose measuring
- Automatic calculation of measurement statistical error
- Sound and visual alarm in case threshold level is exceeded for dose and dose rate
- Night time and low light operation is possible
- Fit for work in hard temperature conditions (AT2140A, AT2140A/1)
- Average service life is not less than 15 years



ATOMTEX[®]

INSTRUMENTS AND TECHNOLOGIES FOR NUCLEAR
MEASUREMENTS AND RADIATION MONITORING


AT2140 Dosimeters

| Dosimeter main parameters | AT2140 | AT2140A | AT2140A/1 |
|---|---|--|-----------|
| Indication range of ambient gamma radiation dose equivalent rate | 0.01 $\mu\text{Sv/h}$ – 10 mSv/h | 0.01 $\mu\text{Sv/h}$ – 100 mSv/h | |
| Measurement range of gamma radiation ambient dose equivalent rate | 0.1 $\mu\text{Sv/h}$ – 10 mSv/h | 0.1 $\mu\text{Sv/h}$ – 100 mSv/h | |
| Indication range of gamma radiation ambient dose equivalent | 0.01 μSv – 9.99 Sv | | |
| Measurement range of ambient gamma radiation dose equivalent | 0.1 μSv – 1.99 Sv | | |
| Limit of intrinsic relative measurement error | $\pm 15\%$ | | |
| Calibration error | $\pm 5\%$ max | | |
| Sensitivity to ^{137}Cs gamma radiation | 1.8 cps/ $\mu\text{Sv}\cdot\text{h}^{-1}$ | | |
| Energy range | 50 keV – 3 MeV | | |
| Energy dependence relative to 662 keV (^{137}Cs) | $\pm 30\%$ | $\pm 25\%$ | |
| Anisotropy in angular spacing $\pm 60^\circ$ For ^{137}Cs и ^{60}Co For ^{241}Am | $\pm 25\%$ $\pm 60\%$ | | |
| Response time for dose rate change | ≤ 10 s | ≤ 5 s | |
| Burn-up life | ≥ 100 Sv | | |
| Radiation overloading | The dosimeter withstands a 100-fold exceedance of the upper limit of dose rate measurement range with indication of readings not lower than the upper limit value | | |
| Power supply options | 2 x AA-size batteries or 2 x AA-size rechargeable cells with nominal voltage 1.2V | | |
| Total operation time with one battery pack in natural radiation background | ≥ 5000 h | ≥ 10000 h | |
| PC interface | – | – | USB |
| Drop protection | – | From ≤ 1.0 m to hard surface | |
| Protection class | IP40 | | |
| Average operating life | ≥ 15 years | | |
| Operation temperature range | -20°C to $+50^\circ\text{C}$ | -30°C to $+60^\circ\text{C}$ | |
| Relative humidity with air temperature $\leq 35^\circ\text{C}$ without condensation | $\leq 95\%$ | | |
| Overall dimensions, weight (w/o batteries) | 111x70x28 mm, 110 g | | |


The dosimeters meet requirements of GOST 27451-87 ("Ionizing radiation measuring means") and IEC 60846-1: 2009, electrical safety standards of IEC 61010-1:2001 and electromagnetic compatibility requirements of: IEC 61000-4-2:2008, IEC 61000-4-3:2008. Radio interference level of the dosimeters does not exceed standards of EN 55011:2009.

Design and specifications are subject to change

Typical sensitivity variation of dosimeters

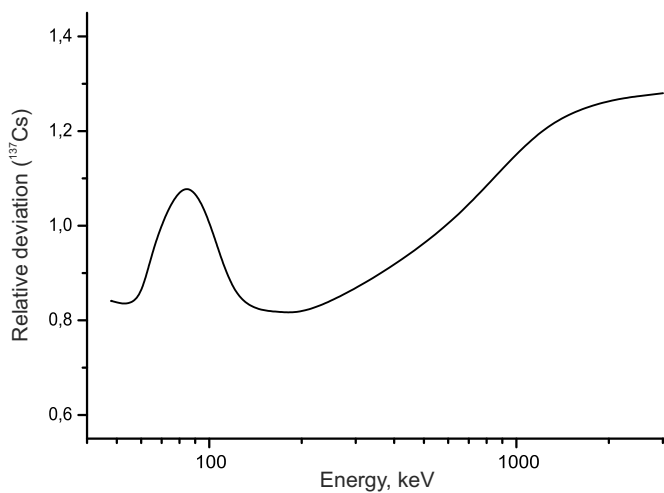

Typical energy dependence of the dosimeter relative to 662 keV (^{137}Cs)

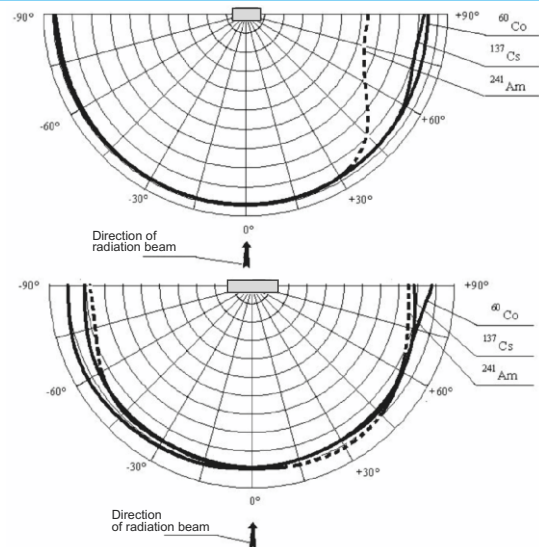

Typical sensitivity variation of dosimeters with gamma radiation angle of incidence



ATOMTEX[®]
<http://www.atomtex.com>

5, Gikalo st., 220005 Minsk,
 Republic of Belarus
 Tel./fax: +375 17 2928142
 E-mail: info@atomtex.com



Corporate Member
 of European
 Nuclear
 Society