AT6130 Radiation Monitor

Pocket Radiation Monitor

Compact device intended for gamma and X-radiation ambient dose equivalent and ambient dose equivalent rate measurement, as well as for measurement of beta particle flux density on contaminated surfaces.

In search mode it measures count rate in counts per second.

AT6130 HAS TWO VARIANTS:

- w/o PC communication interface
- with Bluetooth interface



Operating principle

Device operating principle is based on the process of count rate measurement of impulses, generated in Geiger-Muller counter tube under the influence of X, gamma and beta radiation.



When the filter cap opens the instrument switches to beta particle flux density measurement mode automatically.

Count rate is converted automatically into measurable physical values throughout the range. Energy compensating filter allows correcting energy dependence of sensitivity efficiently in entire energy range of photon radiation.

Microprocessor-based unit is responsible for controlling the radiation monitor operating modes, calculations, storing and displaying measurement results and for self-checking function.

The Radiation monitor can be secured in a holder to facilitate evaluation of radioactive contamination.



Applications

- Radiation protective measures in case of nuclear disasters
- Civil protection
- Radioecology
- Fire-fighting service
- Customs service
- Dosimetric monitoring in manufacturing facilities, health care and other institutions
- Identification of banknote, identity document, personal belongings, clothing, etc. contamination with radioactive substances

Features

- Low weight and small size
- Automatic compensation of intrinsic detector background
- Sound and visual alarm in case threshold level is exceeded for dose, dose rate and flux density
- Rapid reaction to statistically significant change of dose rate (measurement process restart)
- Selective measurement of beta and gamma radiation in mixed fields
- Field operation capability over a wide temperature range
- In search mode each registered gamma quantum (beta particle) is indicated by a sound signal
- Up to 2000 measurement results can be stored in non-volatile memory with information about measurement date and time
- Measurement results, current time, date and battery life indicator is displayed on matrix LCD screen
- Measurement results can be transmitted to a PC via Bluetooth interface (If available)
- Headphones can be attached when working in noisy environment
- Bright white backlit LCD-screen
- Display in either Sv/h or in rem/h (configurable per request)







AT6130 Radiation Monitor

\mathbf{a}		:	C:		4	on
-	ne	ואנ	TI.	ca	TI	On.
$\mathbf{\circ}$	\sim	, 01		vu	u	\mathbf{v}_{11}


Specification					
Ambient gamma and X radiation dose rate equivalent indication range *	0.01 μSv/h10 mSv/h or 1 μrem/h1 rem/h				
Ambient gamma and X radiation dose rate equivalent measurement range *	0.1 μSv/h10 mSv/h or 10 μrem/h1 rem/h				
Ambient gamma and X radiation dose equivalent indication range *	1 nSv100 mSv or 0.1 μrem10 rem				
Ambient gamma and X radiation dose equivalent measurement range *	0.1 μSv100 mSv or 10 μrem10 rem				
Beta particles measurement range: * - flux density - surface activity - count rate	101·10 ⁴ particle·min ⁻¹ ·cm ⁻² 0.5500 Bq·cm ⁻² 0.11·10 ⁴ cps				
Intrinsic relative error of dose rate measurement in the range from 0.1 µSv/h to 10 mSv/h (10 µrem/h1 rem/h)	±20% max.				
X and gamma radiation energy range	20 keV3 MeV				
Spectrum maximum energy range of registered beta particles	155 keV3.5 MeV				
Energy dependence relative to 662 keV (137Cs)	±30%				
Sensitivity To ¹³⁷ Cs gamma radiation To ⁹⁰ Sr + ⁹⁰ Y beta radiation	2.8 cps/µSv·h ⁻¹ 0.05 cps/particles·min ⁻¹ ·cm ⁻²				
Response time for dose change from 1 to 10 µSv/h	≤7s (accuracy error ≤±10%)				
Radiation overloading	Radiation monitor can withstand 100-fold rise of dose rate measurement and beta particles flux density upper range limit for 5 minutes with readings not lower than maximum				
Burn-up life	≥100 Sv				
Continuous run time	≥500 h				
Working temperature range	-20°C+55°C				
Relative humidity with air temperature ≤35°C without condensation	≤95%				
Drop protection	From ≤1.5 m to hard surface				
Protection class	IP57				
Power supply	2 x AAA-size batteries (LR 03) or 2 x AAA-seize rechargeable cells with nominal voltage 1.2 V				
Overall dimensions, weight	110x60x38 mm, 0.25 kg				

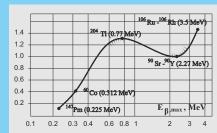

Normal relationship between monitor sensitivity and maximum beta spectrum energy during beta radiation flux density measurement



Normal energy relationship between monitor sensitivity and ¹³⁷Cs gamma radiation energy of 662 keV

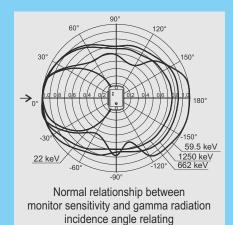

to the calibration direction

The radiation monitor AT6130 meets International standard requirements: IEC 60846-1:2009

IEC 60325:2002

Safety standard requirements:

IEC 61010-1:2001

EMC requirements:

EN 55011:2009

IEC 61000-4-2:2008

IEC 61000-4-3:2008

The radiation monitor AT6130 has the pattern approval certificates of Republic of Belarus, Russian Federation, Ukraine, Kazakhstan and Lithuania.

Design and specifications are subject to change without notice









^{*} Units of measure are chosen during ordering procedure and cannot be altered later